

VRNCOLL28

NON-RETURN VALVE

Non-return valve to be assembled inside the air-system manifold



VNR32M32F32

BLOWER NON RETURN VALVE

For blower; for installation with clip only.

Connection: \varnothing mm 32

